

Model 116

Oil type and capacities

Oil type	Hydraulic oil
Approved oil	refer to „Specifications for Service Products“ page 344

Total capacity of system	approx. 5.8 l
--------------------------	---------------


Capacity of oil supply tank up to marks on oil dip stick	max.	approx. 3.6 l
	min.	approx. 2.6 l

Special tool

Funnel with filter




111 589 04 63 00

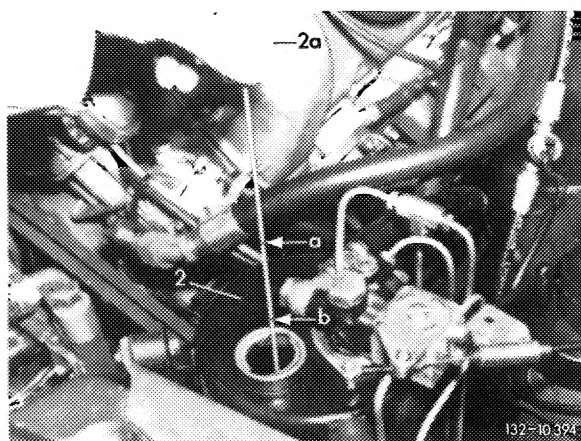

2 Oil supply tank
2a Closing cover with oil dip stick

a Max. mark
b Min. mark

- Run engine for a short period with the vehicle on its wheels ready for driving and at normal vehicle level.
- Remove closing cover of oil supply tank with engine stopped.
- Wipe oil dip stick with lint-free cloth and read oil level after immersing dip stick again.

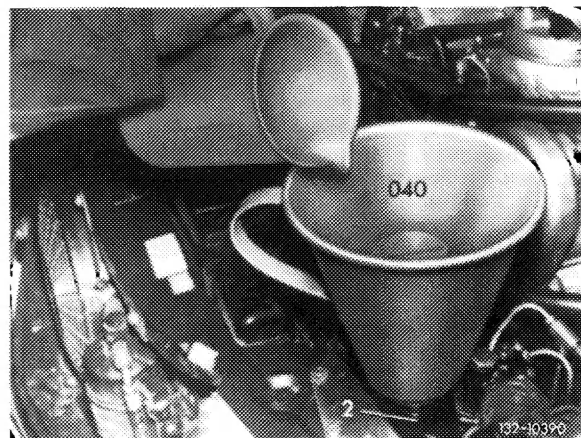

2 Supply tank

040 Funnel with filter

Use oil funnel with filter for filling up.